


Serpentine w/ P.S

(A)

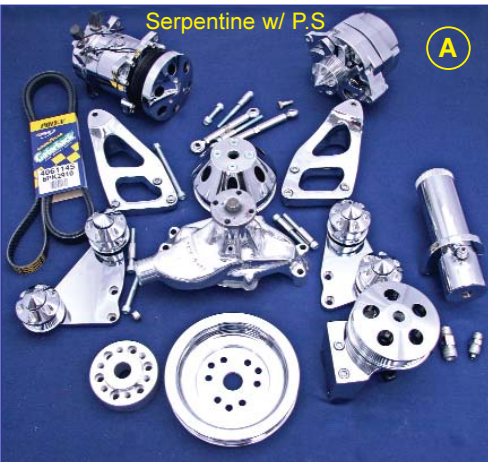

Serpentine No P.S

(B)



SWP BLOWER ALT/AIR V-BELT BRACKET AND BAR KIT

Complete Bracket Kits (as pictured) includes, Water Pump, Pulley Set, Idler Kit, PS Kit, GM 1 Wire 90 Amp Alternator, 508 Sanden Compressor, Alum. Alt Fan, 508 Front Cover, all Mounting Bolts, and Belts. **(Any item that you already have can be removed from the package and price reduced.)**

Part #	BLOWER Alt & Air With Power Steering	Polished	Chrome
A.	Blower Serpentine Alt & Air Kit with Type III PS Pump (Kit fits 86 Earlier Iron Heads) & all GM Alum Heads (Includes Hub Adaptor).....	2336.95	2659.95
D.	Blower V-Belt Alt & Air Kit with Type I PS (Kit fits 87 later Iron Heads) & some aftermarket Aluminum Heads. (Includes Hub Adaptor).....	1658.95	1905.95
	BLOWER Alt & Air Without Power Steering		
B.	Blower Serpentine Alt & Air Kit (Kit fits 86 Earlier Iron Heads) & all GM Alum Heads (Includes Hub Adaptor).....	1866.95	2128.95
C.	Blower V-Belt Alt & Air Kit (Kit fits 87 later Iron Heads) & some aftermarket Alum Heads (Includes Hub Adaptor).....	1187.95	1374.95



360 / 10 Water Neck
\$81.95 Polished
\$92.95 Chrome

BLOWER HUB SPACERS

It helps us to know what brand of blower you have. Weiland, B&M, Hampton, Holley, BDS and Mooneyham all have slightly different drives. We also need to know Crank bolt configuration, i.e. 3 bolt or 6 bolt balancer, fluid damper or 6 bolt steel hub with male register.

V-Belt Type I P.S

(D)



V-Belt No P.S

(C)



19 SBC Blower/Street Rod Style Bracket - V-Belt/Serpentine